


## Five accessories

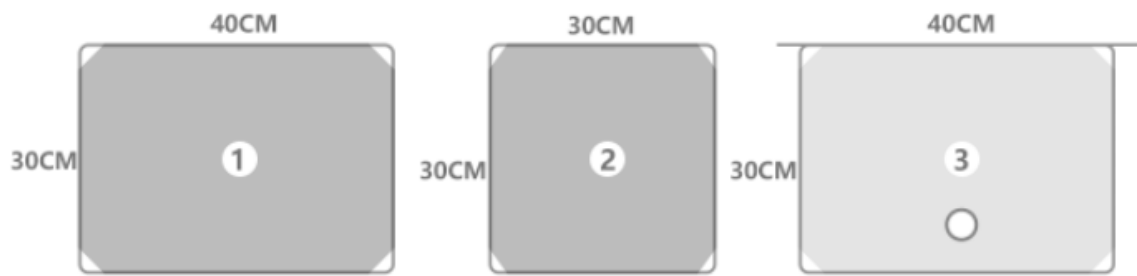

NO. 1 Sheet

NO. 2 Sheet

Door panel



Snap




Cato


## Shoe cabinet

### Installation steps

#### Step 1: Make a base

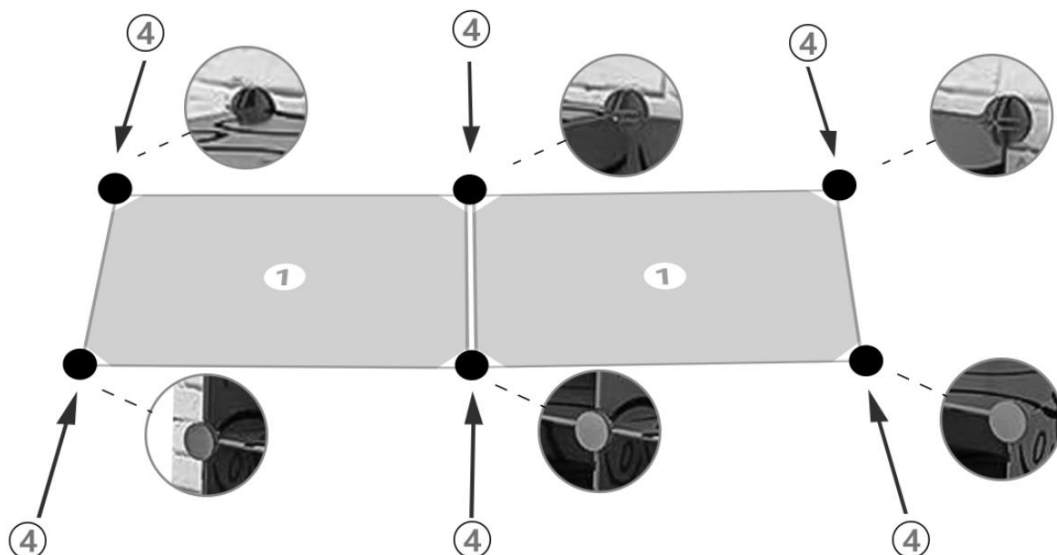


## Step 2: Install side panels

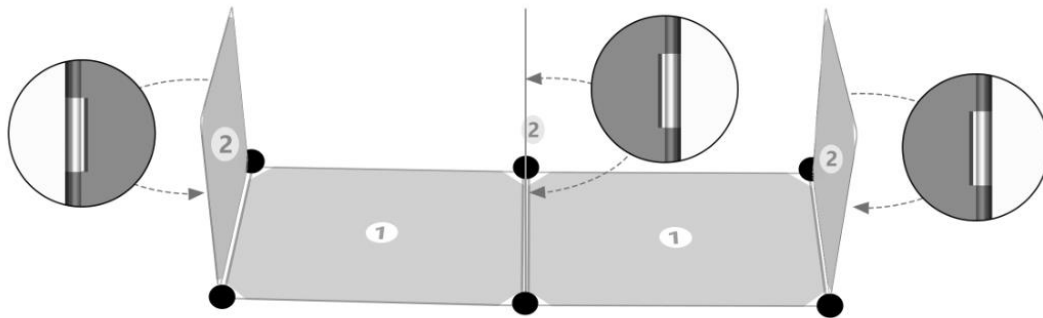


Take out the No.2 sheet , insert the fully wrapped side vertically into the buckle, and the position of the steel bar is exposed, as shown in the figure.

## Step 3: Install Cato


Install the Cato ⑤ in the exposed position of the side bar reinforcement, as shown in the figure.

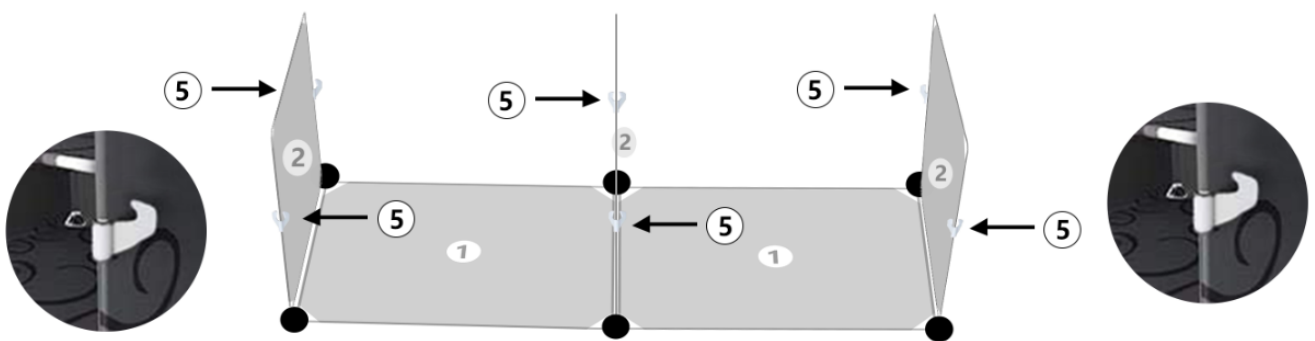

Install the Cato ⑤ into the bare steel bar.

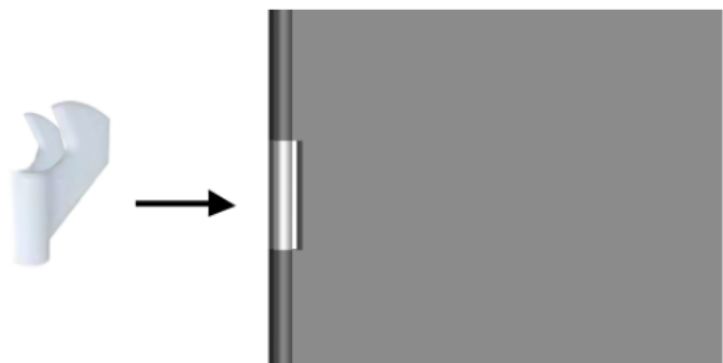


#### Step 4: Partition

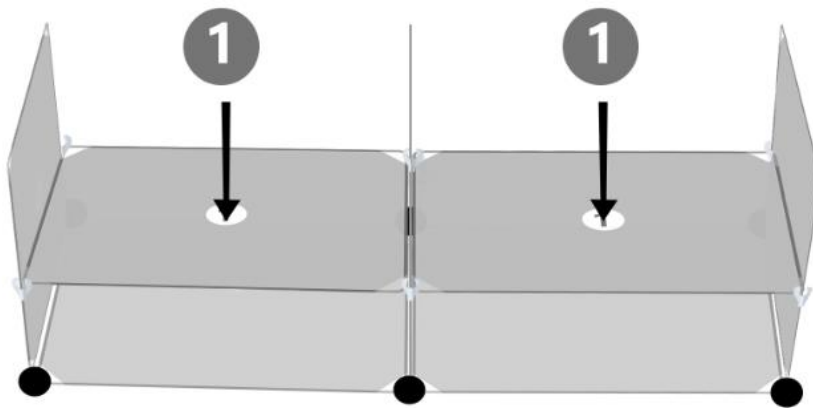


Snap the No.1 sheet  
in parallel into the cato ⑤ slot

#### Step 5: Install back panel

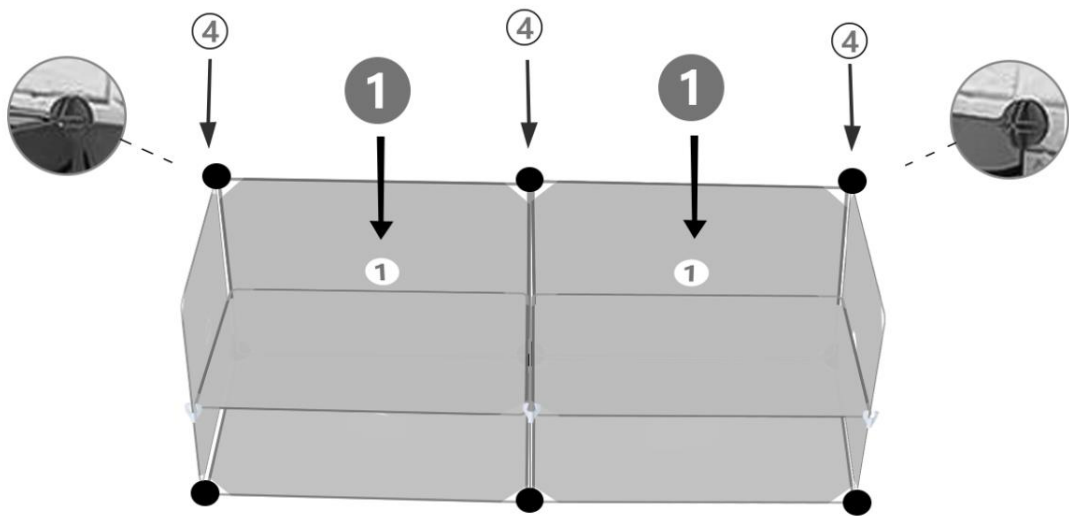

Install the NO.1 panel into the snap ④ in the bottom, and install more 3pcs snap ④ on top, same as the instruction picture.

### Step 6: Install top panel

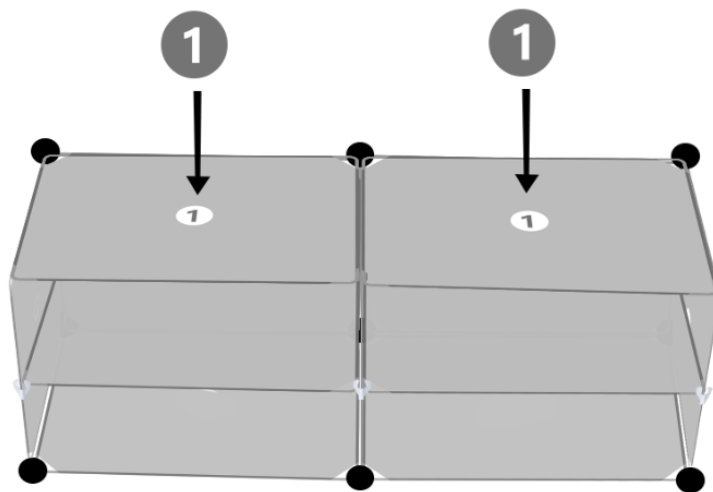

Install the NO.1 panel in the snap ④



## Step 7: Door panel

Insert the buckle ④ in the steel tube of the door panel 3, same position with the instruction picture



The  
door

panel is inserted into the buckle sector card slot.

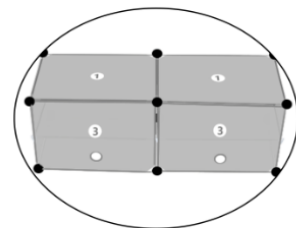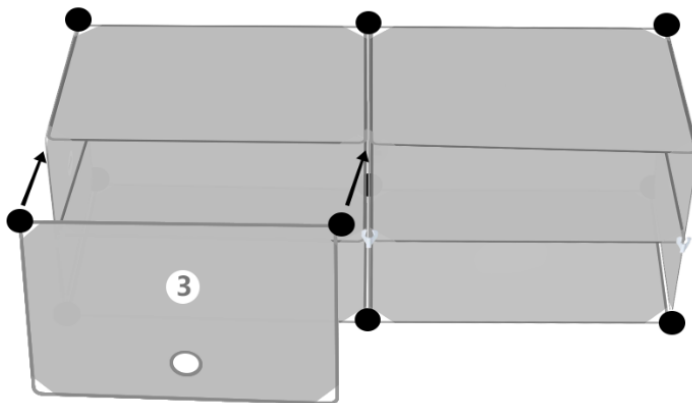

**Then repeat the above steps.**